
Update Instructions

Using the Web Server:

Requirements:


- GN-OSIR-Z1199 (HT-OSIRIS-DSP1)
- Firmware File
- Computer on the same network as the Osiris DSP

1. Download the firmware file from hallresearch.com and extract the contents of the .zip file to a folder on the computer desktop.
2. Connect an Ethernet cable from the computer, containing the firmware, to the same network where the GN-OSIR-Z1199 (HT-OSIRIS-DSP1) is connected.
3. The Osiris is set to STATIC by default with a **192.168.10.254** address. If you have not updated your network settings, this is the static address.
4. Login to the web server. Refer to the Manual for more information.

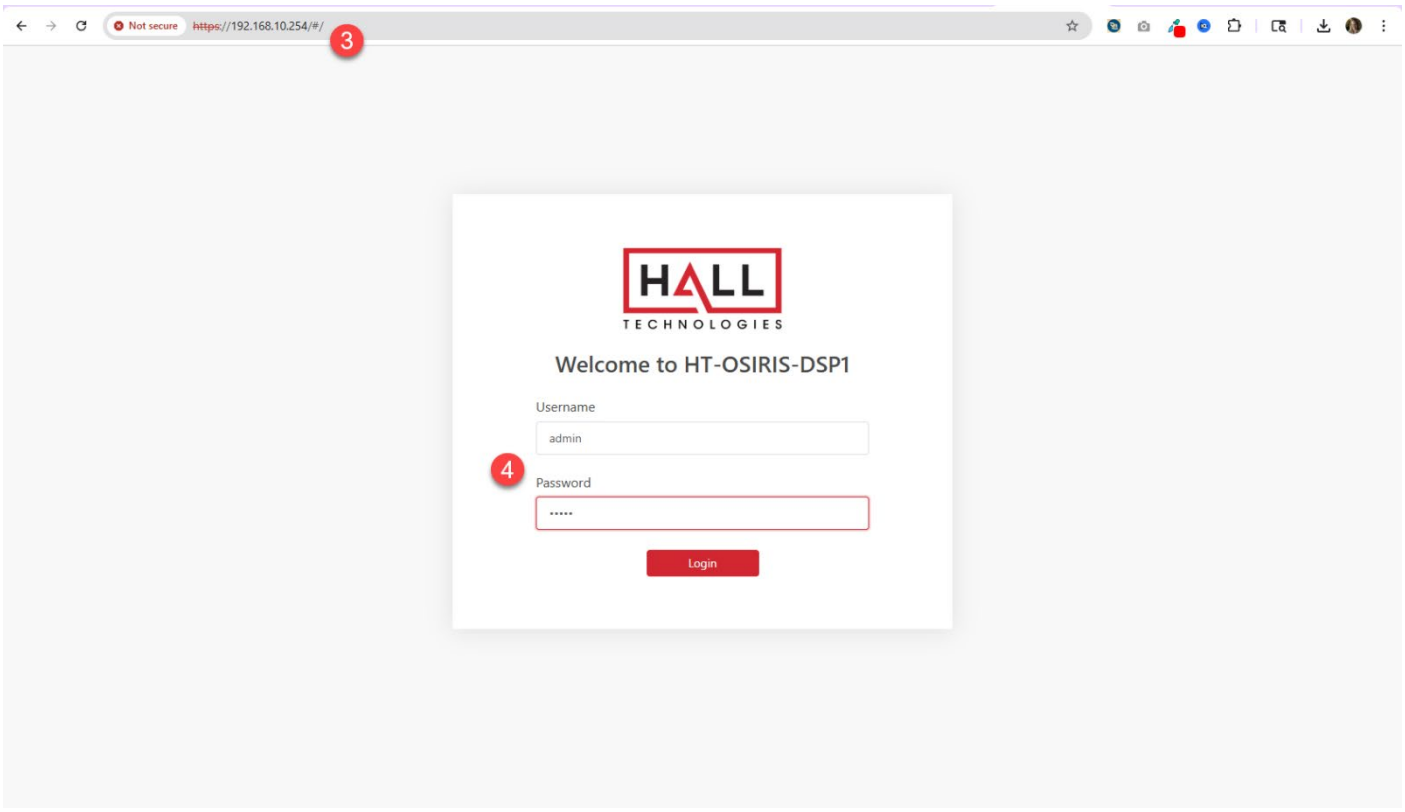


Update Instructions

5. Click System in the menu bar.
6. Click the Firmware Upgrade name to browse to the file location, under the Firmware Update section.

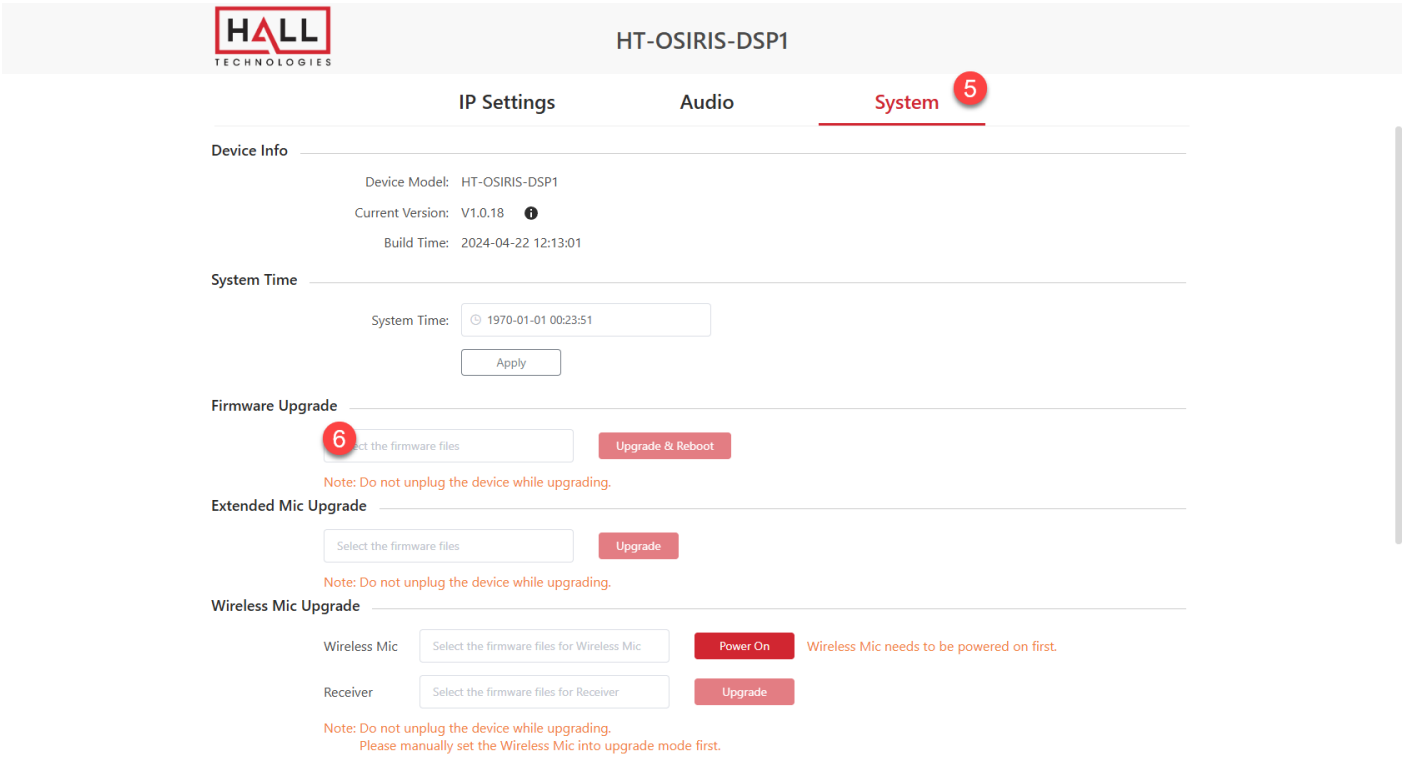

7. Click the Upgrade & Reboot button

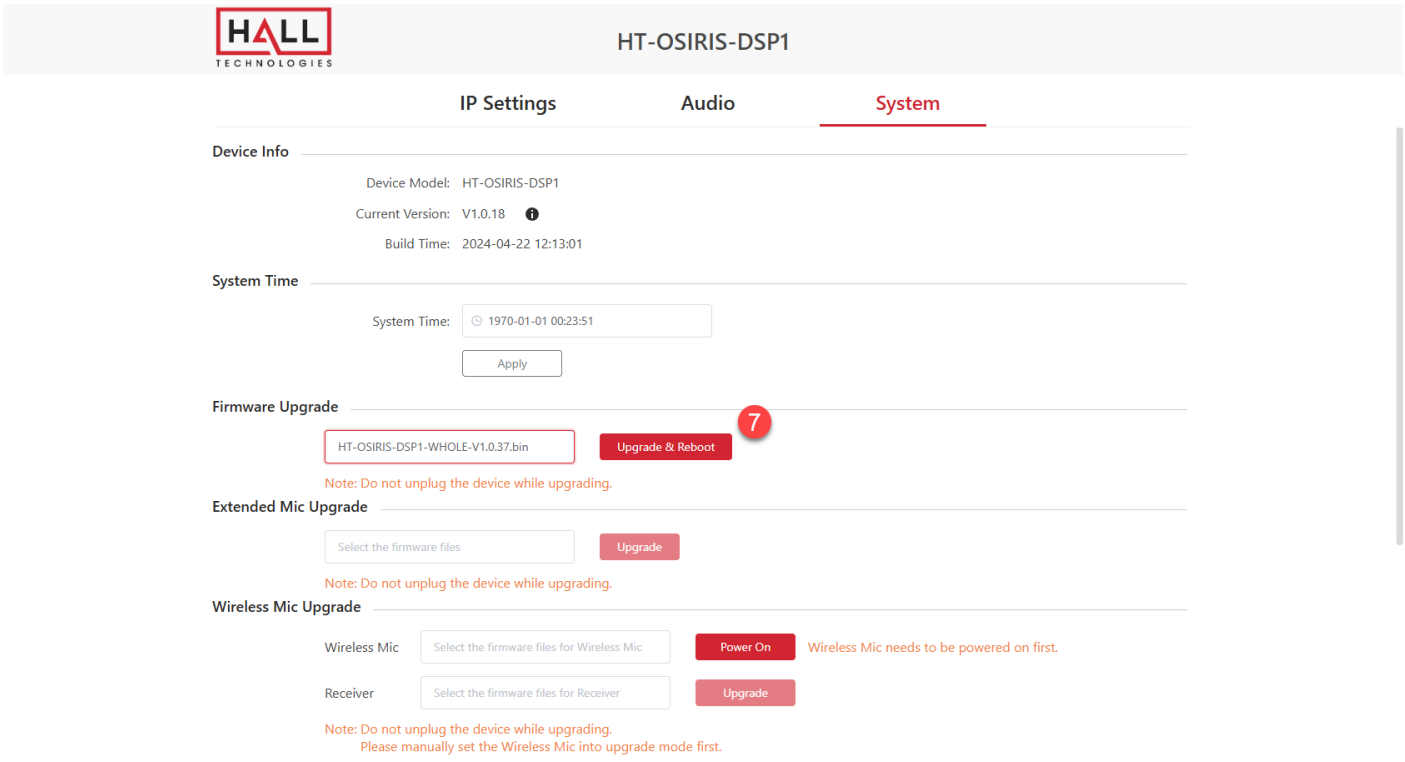

The unit will reboot when the upgrade is finished

